

Dip bank 1			1	2	3	4	5	6	7	8
Hopper værdi	Hopper 1	Hopper 2								
	-	20	ON	ON	ON	ON				
	-	10	ON	ON	ON	OFF				
	-	5	ON	ON	OFF	ON				
	-	2	ON	ON	OFF	OFF				
	-	1	ON	OFF	ON	ON				
	20	20	ON	OFF	ON	OFF				
	10	10	ON	OFF	OFF	ON				
	5	5	ON	OFF	OFF	OFF				
	2	2	OFF	ON	ON	ON				
	1	1	OFF	ON	ON	OFF				
	20	10	OFF	ON	OFF	ON				
	20	5	OFF	ON	OFF	OFF				
	20	2	OFF	OFF	ON	ON				
	10	5	OFF	OFF	ON	OFF				
10	1	OFF	OFF	OFF	ON					
5	1	OFF	OFF	OFF	OFF					
Veksel mode	Veksel op(2x5 = 10)						ON			
	Straks udbetaling						OFF			
Læser mode	Binær (15 kanal)							ON		
	Standard(4kanal)							OFF		
Hopper tom mode	LowLevel								ON	
	TimeOut								OFF	
€-kurs (kun binær)	7,2 kr									ON
	7,0 kr									OFF

Dip bank 2			1	2	3	4	5	6	7	8
Seddel tabel (kun std mode)	SEK	se tabel	ON							
	DKK		OFF							
Tæller	Ikke aktiv			ON						
	Aktiv			OFF						
Tæller faktor	1:10				ON					
	1:1				OFF					

Seddel værdi	Std DKK	Std SEK	Binær
10			Kanal 1
20		Kanal 1	Kanal 2
50	Kanal 1	Kanal 2	Kanal 3
100	Kanal 2	Kanal 3	Kanal 4
LockOut			Kanal 5
200	Kanal 3		Kanal 6
500	Kanal 4	Kanal 4	Kanal 7
1000			Kanal 8
5€			Kanal 9
10€			Kanal 10
20€			Kanal 11
50€			Kanal 12

Mønt værdi	
1 kr	Kanal 1
2 kr	Kanal 2
10 kr	Kanal 4
20 kr	Kanal 5
5 kr	Kanal 6

Fejlkoder vises på LED i døren		Rød	Grøn	Tekst
	Kode 1	Langsom blink	Langsom blink	Time out på hopper
	Kode 2	Hurtig blink	Langsom blink	Hopper sw fejl - for lang puls
	Kode 3	Langsom blink	Hurtig blink	Hopper fejl - intern reg negativ
	Kode 4	Blink	OFF	Overflow - intern reg over 255
	Kode 5	Konstant	OFF	Low level i hopper
	Kode 6	Konstant	Konstant	Veksling i gang
		Konstant	Veksler klar	